



# OWNER'S MANUAL

## FULL PREPARATION PACKAGE

### MOBILE PHONE







© 2007 Bayerische Motoren Werke  
Aktiengesellschaft  
Munich, Germany  
Reprinting, including excerpts, only with the  
written consent of BMW AG, Munich.  
Order No. 01 41 0 014 831  
US English VII/07  
Printed in Germany  
Printed on environmentally friendly paper,  
bleached without chlorine, suitable for recycling.

# CONTENTS

## NOTES

- 4 Using this Owner's Manual
- 4 Symbols used
- 4 Editorial notice

## OVERVIEW

- 5 The concept
- 5 Making calls in the car
- 5 Suitable mobile phones
- 7 Menu navigation

## PUTTING THE MOBILE PHONE INTO OPERATION

- 8 Pairing the mobile phone with the vehicle
- 10 List of paired mobile phones
- 10 Deleting a mobile phone from the device list
- 10 Switching the Bluetooth connection on/off

## OPERATION ON THE CAR RADIO

- 12 Voice quality
- 12 Requirements
- 12 Adjusting the volume
- 12 Receiving a call
- 12 Making a call
- 15 Displaying the call duration
- 15 Continuing an active call on the hands-free system or mobile phone

## OPERATION BY VOICE

- 16 The concept
- 16 Symbols in the Owner's Manual
- 16 Voice commands
- 17 Adjusting the message volume
- 17 Making a call

## MINI CONTACT

- 19 Displaying the phone numbers

## SNAP-IN ADAPTER

- 20 Inserting/removing the snap-in adapter
- 20 Inserting/removing the mobile phone

# NOTES


## USING THIS OWNER'S MANUAL

This Owner's Manual instructs you on how to register your mobile phone for the first time and how to operate it using features in the vehicle.

Should the day arrive when you wish to sell your MINI, please remember to hand this Owner's Manual to the next owner; it is an important part of the vehicle.


For information on other vehicle equipment, please turn to the Owner's Manuals of your vehicle or to the supplementary Owner's Manuals. If you have any questions, your MINI Dealer will be glad to help you.

## SYMBOLS USED

 Indicates precautions that must be followed precisely in order to avoid the possibility of personal injury and serious damage to the vehicle or the full preparation package mobile phone.

◀ Marks the end of a specific item of information.

\* Indicates special equipment, country-specific equipment and optional extras, as well as equipment and functions not yet available at the time of printing.

 Indicates voice commands that must be said word for word.

>...< Indicates voice commands.

>>...<< Indicates responses by the system to voice commands.

## EDITORIAL NOTICE

The manufacturer pursues a policy of continuous, ongoing development that ensures the highest quality standards combined with advanced, state-of-the-art technology for MINI products. For this reason, the features described in this Owner's Manual could differ from those in your vehicle in rare cases.

# OVERVIEW

## THE CONCEPT

Your MINI is equipped with a full preparation package mobile phone. After one-time pairing of a suitable mobile phone with the vehicle, you can operate it using the radio, the buttons\* on the steering wheel and your voice\*.

Once a mobile phone is paired with the vehicle, it will automatically be recognized when it is located inside the vehicle if the vehicle engine is running or the ignition is switched on. Pairing data can be stored for up to four mobile phones at any one time.

## SUITABLE MOBILE PHONES

Ask your MINI Dealer which Bluetooth mobile phones the full preparation package mobile phone supports and for which mobile phones snap-in adapters\* are available. These mobile phones support the functions described in this Owner's Manual. Other mobile phones may not function properly.

## MAKING CALLS IN THE CAR

### Using the snap-in adapter\*

The so-called snap-in adapter, or mobile phone base plate, recharges the battery and connects the mobile phone to the outside antenna of the vehicle, refer to page 20. This provides for good network reception and consistent sound quality. Inquire with your MINI Dealer whether you can use a base plate with your vehicle and for which mobile phones snap-in adapters are available.


Avoid operating a mobile phone that has been recognized by the vehicle on the keypad of the mobile phone as this may lead to a malfunction.

### For your safety



Make entries only when traffic and road conditions allow. While driving, do not make calls with the mobile phone in your hand. Use the hands-free system instead. Otherwise, you may become distracted, potentially placing your own vehicle's occupants and other road users in danger. ◀

# OPERATING THE MOBILE PHONE ON THE CAR RADIO

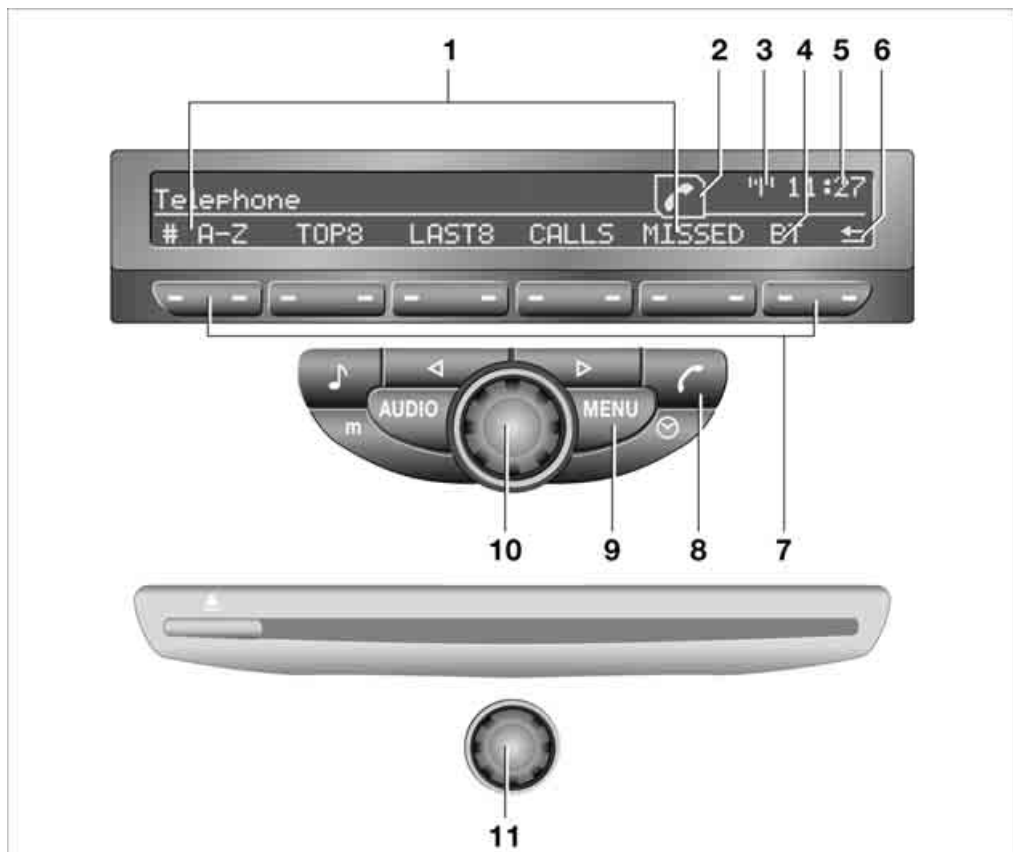

To call up the menu shown above, refer to page 12.

## 1 Making and receiving calls 12

- ▶ #: dial phone number
- ▶ "A-Z": phone book
- ▶ "TOP8": most frequently dialed phone numbers
- ▶ "LAST8": most recently dialed phone numbers
- ▶ "CALLS": received calls
- ▶ "MISSED": missed calls

## 2 Symbol indicating function selected

## 3 Cellular network reception: flashes when a call is being made

## 4 Pairing new mobile phone, deleting pairing data of mobile phone or switching Bluetooth on/off 8

## 5 Time

## 6 Back

## 7 Function buttons for confirming the function displayed above the respective button

## 8 Redialing, accepting calls, starting dialing, terminating calls, changing to telephone menu

## 9 Changing display 12

- ▶ "PHONE": telephone
- ▶ "BC": onboard computer
- ▶ "CONFIG": settings




## 10 Selecting and confirming functions 7

- ▷ Rotate: select function or digit
- ▷ Press: activate function or digit

## 11 Radio on/off, volume


- ▷ Press: switch car radio on/off
- ▷ Rotate: adjust volume 12

 This symbol on the radio display indicates that a call is being made on the hands-free system.

# MENU NAVIGATION

## Selecting and confirming a function

Functions are selected and confirmed by turning the rotary button and pressing it.

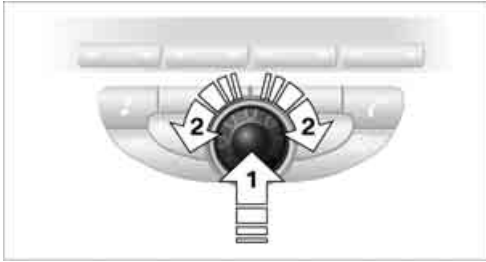

1. Turn the rotary button, arrow **2**, to select a function by marking it, e.g. "PHONE".



2. Press the rotary button, arrow **1**, to confirm the marked function.

## Function buttons



Press button.

To activate a function, press the left or right side of the button beneath it.

If only one function appears in the display, press the button anywhere – left, right or center.


# PUTTING THE MOBILE PHONE INTO OPERATION

Your vehicle is able to store pairing data for up to four mobile phones at any one time. If the vehicle engine is running or the ignition is switched on, a paired mobile phone will automatically be recognized when it is located inside the vehicle.

## PAIRING THE MOBILE PHONE WITH THE VEHICLE

The following conditions must be met:

- ▷ Suitable mobile phone: The mobile phone is supported by the full preparation package mobile phone. Information on this can be found on the Internet: [www.mini.com](http://www.mini.com)
- ▷ The mobile phone is ready to operate.
- ▷ The Bluetooth connection is activated in the vehicle, refer to page 10, and in the mobile phone.
- ▷ Depending on the mobile phone type, it may be necessary to make certain presettings, e. g. via the following menu items:
  - ▷ Bluetooth switched on
  - ▷ Connection without confirmation
  - ▷ Reconnection
- ▷ Depending on the type of mobile phone, for example, the energy-saving mode may result in the vehicle not being able to identify the mobile phone.
- ▷ To pair the phone, define a number of your choice as the Bluetooth passkey, e.g. 1. This Bluetooth passkey will not be needed again after the phone has been paired successfully.
- ▷ The ignition is switched on.

 To avoid being distracted and thus posing an unnecessary hazard both to your own vehicle's occupants and to other road users, only

pair the mobile phone with the vehicle when the vehicle is parked. ◀

## Switching on the ignition

1. Insert the remote control all the way into the ignition switch.
2. Switch on the ignition by pressing the start/stop button without depressing the brake or clutch pedal.

## Preparations on the radio display

3.  Press button.



4.  Press button.



5.  Press button.



6.  Press button.



Turn the button to display the Bluetooth name of your vehicle.

## Preparations on the mobile phone

7. Additional steps must be performed on the mobile phone and vary depending on the mobile phone type, refer to the operating manual of your mobile phone, e.g. under searching, connecting or linking a Bluetooth device. The Bluetooth name of the vehicle also appears on the mobile phone display.

8. Select the Bluetooth name of the vehicle on the mobile phone display.


## Pairing the mobile phone

Depending on the mobile phone, you will see messages, first on the mobile phone display or on the radio, requesting you to enter the Bluetooth passkey previously determined by you.

Depending on the mobile phone, you have approx. 30 seconds to enter your Bluetooth passkey on the mobile phone and radio display. Display showing that the Bluetooth passkey can now be entered on the radio:



9. Enter the Bluetooth passkey on the keypad of your mobile phone.


10.  Press this button to enter the Bluetooth passkey on the radio.



11. Use function buttons 0-9 to enter the same Bluetooth passkey of your choice that you entered on the mobile phone.


To delete the last digit:



12.  Press this button to confirm the Bluetooth passkey.

Display after several seconds:




13.  Press button if necessary. Display after the mobile phone is paired:



Up to four mobile phones can be paired one after the other. If you wish to pair a fifth mobile phone, you must first delete the pairing data of

one of the other mobile phones, refer to Deleting a mobile phone from the device list.

The next time you use the mobile phone inside the vehicle, it will be recognized within no more than 2 minutes as long as the engine is running or the ignition is switched on.

 For some mobile phone types it may be necessary to make certain settings for a permanent Bluetooth connection, e.g. using the authorization or secure connection menu item, refer to your mobile phone's operating instructions. ◀

As soon as a mobile phone is recognized by the vehicle, the phone book entries stored on the SIM card or on the mobile phone are transferred to the vehicle. This data transfer depends on your mobile phone and can take several minutes; please refer to your mobile phone's operating instructions, if necessary.

If not all phone book entries are displayed:

- ▷ Transfer all phone book entries from the SIM card to the mobile phone, if necessary.
- ▷ Phone book entries with special characters may not be displayed.

## Checks to perform if pairing is unsuccessful

- ▷ Is the mobile phone supported by the full preparation package mobile phone? Information on this can be found on the Internet: [www.mini.com](http://www.mini.com).
- ▷ Do the Bluetooth passkeys on the mobile phone and vehicle match? The same Bluetooth passkey must be entered on the mobile phone's display and on the radio.
- ▷ Did it take you more than 30 seconds to enter the Bluetooth passkey?
- ▷ Only a limited number of devices can be connected with the mobile phone. If necessary, delete connections with other devices.
- ▷ Is the mobile phone no longer responding? Switch the mobile phone off and on or disconnect it briefly from the power supply.

To repeat pairing:



1.  Press button.
2. Repeat steps 6 to 13.

If pairing remains unsuccessful after several attempts, contact Customer Relations.

To display the Customer Relations phone number:





1.  Press button.

Turn the button to display the Customer Relations phone number and the information required for pairing.

## LIST OF PAIRED MOBILE PHONES

You can call up a list of mobile phones whose pairing data are stored in the vehicle. If several mobile phones are detected by the vehicle at the same time, the mobile phone at the top of the list can be operated via the vehicle. This mobile phone is indicated on the radio display by the following symbol: ✓

You can adjust the order in which the mobile phones are listed.


1.  Press button.
2.  Press button.



3.  Press button.






4. Rotate the button until the mobile phone you want to reposition in the list appears.



5.  Press the button repeatedly until the mobile phone is in the desired position.

## DELETING A MOBILE PHONE FROM THE DEVICE LIST


If you no longer wish to operate a particular mobile phone on the vehicle, you can delete the pairing data of that mobile phone.

1. Switch off the mobile phone.
2.  Press button.
3.  Press button.
4.  Press button.








5. Rotate the button until the desired mobile phone appears on the radio display.
6.  Press button.
7.  Press this button to confirm the displayed message.

## SWITCHING THE BLUETOOTH CONNECTION ON/OFF

 Bluetooth technology is not authorized in all countries. Please adhere to local regulations. Temporarily switch off the Bluetooth connection between the vehicle and mobile phone if necessary.

When the Bluetooth connection is deactivated, you can no longer operate the mobile phone on the vehicle, and other devices with a Bluetooth interface can be used via the mobile phone, e. g. a laptop. ◀

To temporarily deactivate the Bluetooth connection between the vehicle and your mobile phone:

1.  Press button.
2.  Press button.
3.  Press button.
4.  Press button.
5.  Press button.

To reactivate the Bluetooth connection:

1.  Press button.



2.  Press button.

# OPERATION ON THE CAR RADIO

The following functions can be operated on the radio:

- ▷ Accepting/rejecting calls
- ▷ Dialing a phone number
- ▷ Dialing a phone number from the phone book
- ▷ Dialing a stored phone number, e.g. from the list of accepted calls
- ▷ Terminating a call

When the ignition and the radio standby mode are switched off, e.g. after taking the remote control out of the ignition switch, you can continue an ongoing call via the hands-free system for a maximum of 25 minutes.

## VOICE QUALITY

If the person you are talking to is unable to hear you clearly, this may be due to excessive background noise. The mobile phone preparation can compensate for these noises to a certain degree. To optimize voice quality during a call, we recommend the following:

- ▷ Reduce background noise, e. g. by closing the windows, lowering the air volume of the air conditioning system or opening the four front air vents and pointing them downward.
- ▷ Reduce the volume of the hands-free system.

## REQUIREMENTS

- ▷ The pairing data of the mobile phone are stored in the vehicle and the mobile phone is ready to operate.
- ▷ The engine is running or the ignition is switched on.
- ▷ The mobile phone is recognized by the vehicle.

## ADJUSTING THE VOLUME




To adjust the volume of the hands-free sound system and the ringing tone, rotate the button while sound is being issued.

## RECEIVING A CALL

If you have the phone number of the caller stored in the phone book and the phone number is transmitted, the name of the entry will be displayed.

### Accepting a call

 Press the button on the radio or steering wheel.

Alternatively:



Press button.

### Rejecting a call



Press button.

## MAKING A CALL

### Dialing a phone number

1.  Press button.



2.  Press button



3.  Press button.

4. Enter the desired phone number on buttons 0-9.

To delete the last digit if necessary:



5.  Press button.

Press the button on the radio or steering wheel.




Alternatively:

Press the button to dial the phone number.

For your phone number to be displayed to the person you are calling, display of the phone number must be enabled by your service provider.

## Terminating a call

1.  Press the button on the radio or steering wheel.

Alternatively:



1.  Press button.

## Dialing a phone number from the phone book or from a list of stored phone numbers

Numbers you dialed, incoming calls and phone book entries are stored in lists if the mobile phone is connected to the vehicle via Bluetooth. If the caller is entered in the phone book, the name of the entry is displayed instead of the phone number.

You can select the desired party from the list and establish the connection.

There are five different lists of phone numbers:

- ▷ "A-Z"

The phone book entries on the SIM card and

mobile phone consist of a name and phone number and are arranged in alphabetical order.

- ▷ "TOP8"

The eight phone numbers in the phone book that are dialed most frequently are automatically stored in the Top 8 list.

- ▷ "LAST8"

The eight phone numbers dialed most recently are stored automatically. The last number dialed is at the top of the list.

- ▷ "CALLS"

The phone numbers of the last eight calls to be accepted are stored. For this function to work, it must be possible to transmit the phone number of the caller.

- ▷ "MISSED"

The phone numbers of the last eight calls that were not accepted are stored. For this function to work, it must be possible to transmit the phone number of the caller.

## Dialing a phone number from the phone book

The A-Z list is available for your phone book entries. If the mobile phone transfers multiple entries with different names but the same phone number to the vehicle, only one entry will be displayed.

The phone book entries displayed on the radio may differ from those displayed on the mobile phone, e.g. the order of the first and last name may vary.



1.  Press button.




2.  Press button.



3.  Press button.

  Arrows indicate that more letters are available for display.

Rotate the button to display the additional letters.

- Rotate the button to select the initial letter of the desired entry.
-  Press the desired button if necessary.


The phone number is dialed.

To display all entries:

- Rotate the button to select the initial letter of the desired entry and press the button.
- Rotate the button to select the desired entry and press the button.



The phone number is dialed.

You can also dial the number using the button on the steering wheel or radio:



-  Press button.

### Editing and dialing a phone number from the phone book

You can edit the phone number before making the call. This change will not be stored in the phone book.



- Select the entry.
-  Press button.
-  Press this button to delete a digit if necessary.
- Enter additional digits using buttons 0-9.
- Press the button to dial the phone number.

### Dialing a phone number from the phone book using the buttons on the steering wheel


-  Press and hold this button to call up the telephone menu.
- Press the arrow buttons on the steering wheel to leaf through the phone book.
-  Press the button to dial the phone number.

### Dialing a phone number from a list of stored numbers


To select an entry and establish a connection:

-  Press button.
-  Press button.



-  Press the desired button to display one of the four lists.
- Rotate the button to select an entry and press the button to dial the phone number.

### Deleting an individual entry

- Select the desired entry from the list.
-  Press button.


### Touch tone dialing

A touch tone code is needed to access network services or operate certain devices, such as when retrieving messages remotely from an answering machine.

This function is available if a connection has been established and if the hands-free system is being used to make the call.

-  Press button.



- Enter the desired code on buttons 0-9.
-  If necessary, press and hold the left or right side of the button to enter special characters.



## DISPLAYING THE CALL DURATION

You can have the duration of the call displayed during the call.




Press button.

## CONTINUING AN ACTIVE CALL ON THE HANDS-FREE SYSTEM OR MOBILE PHONE

### From mobile phone to hands-free system\*

You can continue a call that began beyond the Bluetooth range of the vehicle on the hands-free system if the engine is running or the ignition is switched on. Depending on the type of mobile phone, calls are automatically switched to the hands-free system.

For mobile phones that do not switch over automatically:

- ▷ Depending on the type of mobile phone, you may be able to continue the call on the hands-free system. Follow the instructions on the mobile phone display, refer to the operating manual of the mobile phone.
- ▷  Press the button above the storage tray.

### From the hands-free system to the mobile phone

If you are making a call over the hands-free system, you may be able to continue the call on the mobile phone, depending on the type of mobile phone. Follow the instructions on the mobile phone display, refer to the operating manual of the mobile phone.

Alternatively, you can deactivate the Bluetooth connection.

Depending on your type of mobile phone, poor reception of the wireless network may cause the call to switch from the hands-free system to the mobile phone.


# OPERATION BY VOICE\*

## THE CONCEPT

You can operate your mobile phone without having to remove your hands from the steering wheel. Messages and questions will support you as you make your entries.


The same requirements apply as when operating the mobile phone on the radio, refer to page 12.

## SYMBOLS IN THE OWNER'S MANUAL

-  ›...‹ Say the specified commands word for word.
- ››...‹‹ Indicates responses by the system.

## VOICE COMMANDS


### Activating the system


-  Briefly press the button on the steering wheel.  
A sound signal indicates that you can say commands. Display on the radio:



- Say the command.

### Deactivating the system

 Press the button on the steering wheel briefly  
or

 ›Quit‹.


In dialogs in which you say a text and not a command, e.g. a name, the procedure can only be quit using the button on the steering wheel.

## Commands

The system understands predefined commands that must be said word for word.

### Opening help

You can have the available commands read aloud for you at any time:

 ›Help‹.

### Using alternative commands

There are often several commands that can be used to control the same function, e.g.:

 ›Dial name‹ or ›Name‹.

The system understands the digits zero to nine. You can save each digit individually or group them in a sequence to accelerate digit entry.


### Important for voice commands

For information on how to operate the mobile phone using the voice control system, refer to the Owner's Manual for Vehicle.

For voice commands, bear in mind the following:

- ▶ Pronounce the commands smoothly and at normal volume, avoiding excessive emphases and pauses.
- ▶ Keep the doors, windows and glass sunroof closed to prevent interference from ambient noise.
- ▶ Avoid extraneous noise in the vehicle while speaking on the mobile phone.

## Dialing a phone number – an example

 Briefly press the button on the steering wheel.

You say	Voice control responds
›Dial number‹	››Please speak the number‹‹
e.g. ›555-0100‹	e.g. ››555-0100. Continue?‹‹
›Dial‹	››Dialing‹‹

## ADJUSTING THE MESSAGE VOLUME




Rotate the button while a message is being voiced.

This volume will be retained for the messages even if you reduce the volume of other audio sources to a minimum level.

## MAKING A CALL


### Dialing a phone number

-  1. ›Dial number‹.
2. Say the phone number.  
For telephone calls abroad, say ›Plus‹ and then the country code.
3. ›Dial‹.

The connection to the desired party is established.

### Correcting a phone number

After the last spoken sequence of digits has been repeated by the system, you can delete this sequence of digits.

-  ›Correction‹.  
The sequence of digits is deleted.

The ›Correction‹ command can be repeated as often as necessary.

### Deleting a phone number

-  ›Delete‹.

All digits entered up to this point are deleted.

### Voice phone book

Operation by voice command requires a personal voice phone book. Depending on the equipment, the entries are either transferred from the memory of your mobile phone or they must be entered independently. You cannot use voice commands to select numbers stored in the mobile phone, nor can you use voice commands to store numbers there.

## Storing an entry

An entry always consists of a name and phone number.

1. ›Store name‹ .  
The dialog for storing a name is opened.
2. Say the name.  
The spoken length of names in the phone book must not exceed approx. 2 seconds.
3. Say the phone number after being prompted to do so by the system.
4. To store the phone number: ›Store number‹ .

## Dialing the phone number of an entry

1. ›Dial name‹ .  
The dialog for selecting an entry is opened.
2. Say the name after being prompted to do so by the system.
3. Confirm query with ›Yes‹ .

## Reading the entries

You can have all the entries of your voice phone book read aloud in the order of input and select a specific entry to establish a connection:

1. ›Read phone book‹ .  
The dialog for having the phone book read aloud is opened.
2. ›Dial number‹ after the desired entry is read.

## Redialing

To redial the phone number last dialed:

- ›Redial‹ .

## Deleting an entry from the voice phone book

You can delete any entry from the voice phone book:

1. ›Delete name‹ .  
The dialog for deleting an entry is opened.
2. Say the name after being prompted to do so by the system.
3. Confirm query with ›Yes‹ .

## Deleting all entries from the voice phone book



1. ›Delete phone book‹ .  
The dialog for deleting the phone book is opened.
2. Confirm query with ›Yes‹ .
3. Confirm repeat query with ›Yes‹ .

# MINI CONTACT\*

You can call up various service numbers on the display.

- ▷ "Road Assist": Mobile Service\*, if you need assistance in case of a breakdown.
- ▷ "Serv. Appt.": MINI Dealer, to arrange a service appointment, for example.
- ▷ "Customer Relations": Customer Relations\*, for any information you may need on your vehicle.

## DISPLAYING THE PHONE NUMBERS

1.  Press button.
2.  Press button.




3. Turn the button until the desired phone number is displayed.

# SNAP-IN ADAPTER

## INSERTING/REMOVING THE SNAP-IN ADAPTER


1. Press area 1 surrounding the button and remove the cover.

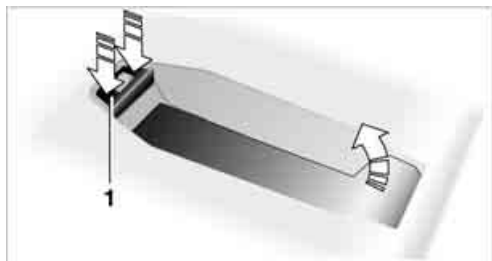

2. Insert the snap-in adapter in the front, arrow 1, and press it downward, arrow 2, until it engages.




3. To remove the snap-in adapter, press area 1 surrounding the button.

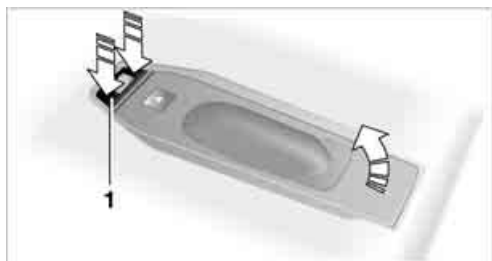

## INSERTING/REMOVING THE MOBILE PHONE


1. Depending on the type of mobile phone, remove the protective cap of the mobile phone antenna connector so that the mobile phone can snap into place in the snap-in adapter.
2. With the buttons facing up, slide the mobile phone toward the connectors and press down until it snaps into place.

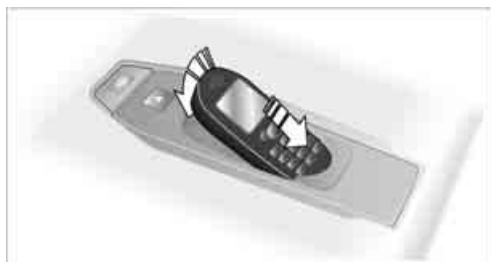

The battery will be charged when the vehicle is at least in radio standby mode, see the charge display on the mobile phone.

To remove the mobile phone:

Press button.

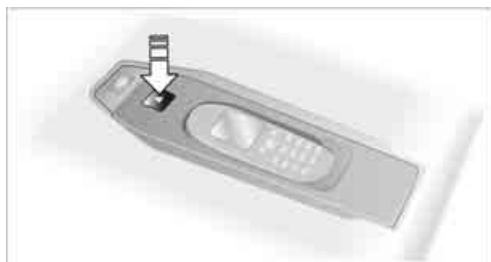



01 41 0 01 4 831 ue Cell. Prep.

**TALK TO ME.**